

CK BIRLA GROUP



switch to smart

USER MANUAL

ORIENT PROTEUS
BOX FAN



switch to smart

Fans • Home Appliances • Lighting • Switchgear

Orient Electric Limited

(a CK Birla Group company)
240, Okhla Industrial Estate, Phase III
New Delhi-110020

Orient Helpline no.: 1800 103 7574 (Toll Free)


Email: customer.connect@orientelectric.com

Website: www.orientelectric.com

Follow us on:     

Shop Online: www.orientelectricshop.com

Orient Helpline no.:
1800 103 7574 (Toll Free)

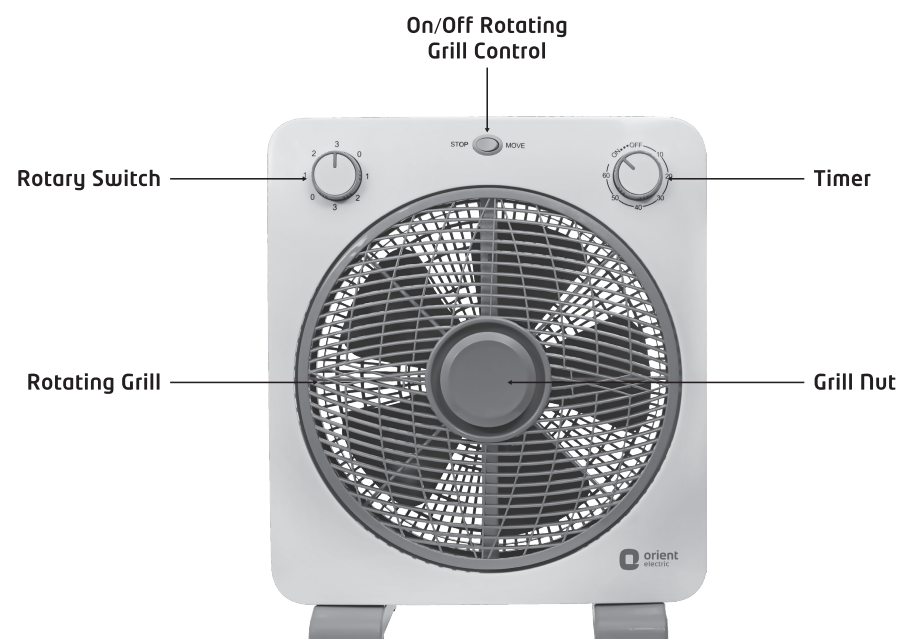

Guide to better fan maintenance

1. Use in a dry place. Free of excessive humidity and water.
2. Unplug fan before cleaning and disassembly. Wipe away dirt with a clean cloth. Plastic parts should be cleaned with mild soap and a damp cloth. Remove soap film thoroughly with a clean cloth.
NOTE: Do not immerse in water. Do not allow water or any other liquid to get into unit.
To assemble each part, reverse the order disassembly.
 - (I) Remove rotating grill nut.
 - (II) Slide off rotating grill.
3. Before putting the fan in storage, clean thoroughly, cover with plastic bag and store in a dry place.

Operating instruction, important safety instructions

1. Never insert fingers, pencils or any other objects through the grill when fan is running
2. Disconnect fan when moving from one location to another.
3. Disconnect fan before cleaning.
4. Be sure fan is on a stable surface when operating to avoid chance of over turning.
5. Do not use fan in a window. Rain may cause an electrical hazard.
6. Do not let cord hang over edge of table or counter, or touch hot surfaces.
7. Do not hang or mount fan on a wall or ceiling.
8. Do not operate without grills properly in place.
9. If the supply cord is damaged. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

WARNING: To reduce the risk of fire or electric shock , do not use this fan with any solid-state speed control device.

Read and save these instructions

This fan is for household use and may be plugged into any AC electrical outlet.

Choose a location with a stable surface for fan, and plug power cord into outlet.

Choose the speed desired by turning the dial located on top of the fan to Hi(3), Med(2), Lo(1).

Caution

"The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction"

"Children should be supervised to ensure that they do not play with the appliance"

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. Or similarly qualified persons in order to avoid a hazard.