

## USER MANUAL

ORIENT AUCTOR

### Cleaning And Storage

1. Always unplug the fan before cleaning.
2. Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
3. Ensure that the fan is switched off from the supply mains before removing the guard.
4. To clean between the grilles, we recommend using a pipe cleaner, vacuum cleaner or compressed air to gently remove the dust.
5. DO NOT immerse the fan in water and never allow water to drip into the motor housing.
6. DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
7. For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry, place.

### Caution

**DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY**

### Simple Troubleshooting

1. If the Fan not starting a. Check whether the power line plug is inserted into the socket. B. Check whether the On/Off switch of the fan in turned on; c. Check whether the power supply is OK.
2. During use, if fan vibrates: a. Check whether it is placed on a flat surface; b. Check whether there are foreign matters near it.



*switch to smart*

Fans • Home Appliances • Lighting • Switchgear

#### **Orient Electric Limited**

(a CK Birla Group company)  
240, Okhla Industrial Estate, Phase III  
New Delhi-110020

**Orient Helpline no.:** 1800 103 7574 (Toll Free)

**Email:** customer.connect@orientelectric.com

**Website:** www.orientelectric.com

Follow us on:     

Shop Online: [www.orientelectricshop.com](http://www.orientelectricshop.com)



**Orient Helpline no.:**  
1800 103 7574 (Toll Free)

## Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. To protect against electric shock: do not place fan on window sills, immerse unit, plug or cord in water or spray with liquids.
4. To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate fan with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.
11. Avoid contact with moving fan parts.
12. The use of attachments not recommended by the manufacturer may be hazardous.
13. Place the fan on a dry level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is damaged.
16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
17. Only use on 220-240VAC, 50Hz power supply.
18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
19. Cleaning and maintenance shall not be made by children without supervision.

### Warning:

1. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

## Fan Operation

Plug into any AC 220-240V, 50Hz source, insure that the plug and the socket fit well. All the indicator lights are in a state of micro light and the LED screen display current temperature then the appliance is in stand by mode. You can operate the appliance by the control panel or remote controller

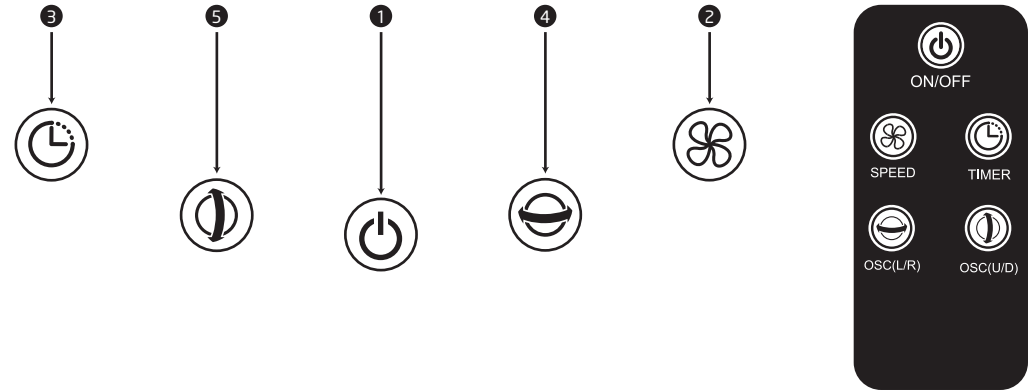

### 1. ON/OFF Button:

Press the button once, the fan will start at mute(1) speed mode, the power & speed indicator become bright . (other indicator are the same)

Press again to turn the fan off.

### 2. Speed Button:

Fan speed adjust: The LED screen will display the setting speed

Press once to set LOW(2) fan speed.

Press the twice time to set MED(3) fan speed.

Press the third time to set HIGH(4) fan speed.

Press the fourth time return to set MUTE (1) fan speed.

### 3. Timer Button:

When the fan is in use, you can set the time to close the appliance. You can press the buttons continually to set the timer off function between 1 and 8 hour in 1hour increment

The LED screen will display the timer setting.

### 4. Up to Down OSC button:

To activate the Oscillation feature, press the button once.

Press again to cancel

### 5. Right to Left OSC button:

To activate the Oscillation feature, press the button once.

Press again to cancel

**Note:** The timer, speed and temperature are showed alternately on the display if they are set.